


HD208

▶ [GB] Minidatalogger

 Temperature

 Humidity



Minidatalogger

Temperature – Temperature/Relative humidity



- Temperature or temperature / relative humidity and dew point data logger
- Available models with fixed probe or probe with cable
- Manual, also with configurable delay time, or programmed (date and time) logging start
- Measurement alarms with configurable thresholds
- USB output
- Automatically generates **PDF** reports and **CSV** files
- Software for configuration, monitor and data download supplied
- Software option available for compliance with **FDA 21 CFR part 11** recommendations
- LCD display and LED indicators for power, logging and alarms.
- Long life lithium battery
- Excellent weather protection



APPLICATIONS

- Monitoring of goods (food, drugs, plants, perishable products in general) during transport and storage
- Laboratories
- Museums and document archives

DESCRIPTION

The data loggers of the series **HD208** are compact instruments for monitoring temperature, relative humidity (RH) and dew point temperature. Usable in a wide spectrum of applications, are available in various models:

- With 1 channel for temperature only (depending on the model, the sensor can be internal, external fixed or external with cable).
- With 1 channel for temperature and relative humidity (combined probe fixed or with cable).
- With 2 channels for temperature only (one external sensor with cable and one internal sensor).
- With 2 channels: one for temperature and relative humidity (combined probe with cable) and one for temperature only (internal sensor).

All models can be supplied with or without LCD display.

The logging function is extremely versatile; logging can be started and stopped manually, by means of the front buttons, or the start and stop date and time of acquisition can be programmed. The delayed start capability allows starting the logging with a configurable delay time after pressing the button for the manual start.

For each quantity detected, two configurable alarm thresholds can alert the user if the measure exceeds the configured parameters.

The instrument automatically generates, after logging, a **PDF report** with charts of the variables collected and a **CSV file** with all measurements logged. The PDF and CSV files can then be copied to the PC via the USB port, without any dedicated software: the instrument is recognized as a USB flash drive.

The basic application software **HD35AP-S** supplied with the instrument allows the configuration of the instrument, the real-time monitor of the measurements and the transfer of the acquired data into a database. The connection to the PC does not require any installation of USB drivers, thereby ensuring compatibility with all versions of the Windows® operating system.

The **HD35AP-CFR21** application software option allows the use of security features of the recorded data and configuration of the instrument in response to **FDA 21 CFR part 11** recommendations.

Powered by a 3.6 V **non rechargeable** lithium-thionyl chloride battery (Li-SOCl₂).

The sensors are pre-calibrated and require no further calibration by the user. If necessary, the user can perform a new calibration using the HD35AP-S application software.

All versions can be ACCREDIA certified, upon quote.





Power supply LED (POWER): briefly flashes every 10 seconds to indicate that the instrument is powered. It is steady on if the instrument is connected to the PC.


Logging LED (LOG): briefly flashes three times when logging starts and stops, and every 10 seconds during logging.

Alarm LED (ALARM): briefly flashes every 10 seconds if any of the measured quantities is in alarm.

START/MODE button: by pressing it briefly, you change the type of information displayed (measures, date/time, alarm thresholds, logging settings); if pressed for more than 2 seconds, manually starts logging. In models without LCD, the button performs only the START function.

STOP/Scroll button: by pressing it briefly, you change the parameter displayed (the parameter depends on the type of information selected with the START/MODE button); if pressed for more than 2 seconds, manually stops logging. In models without LCD, the button performs only the STOP function.

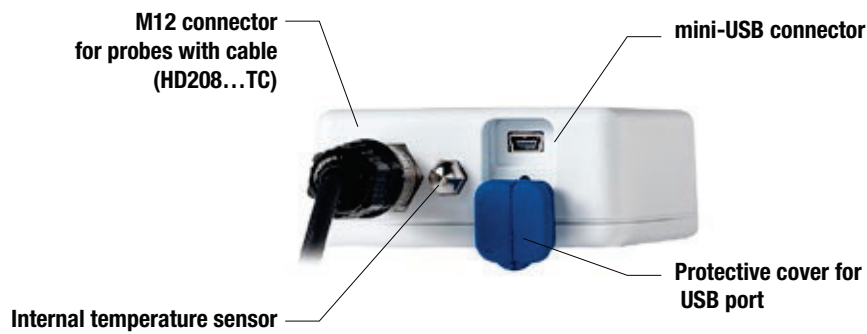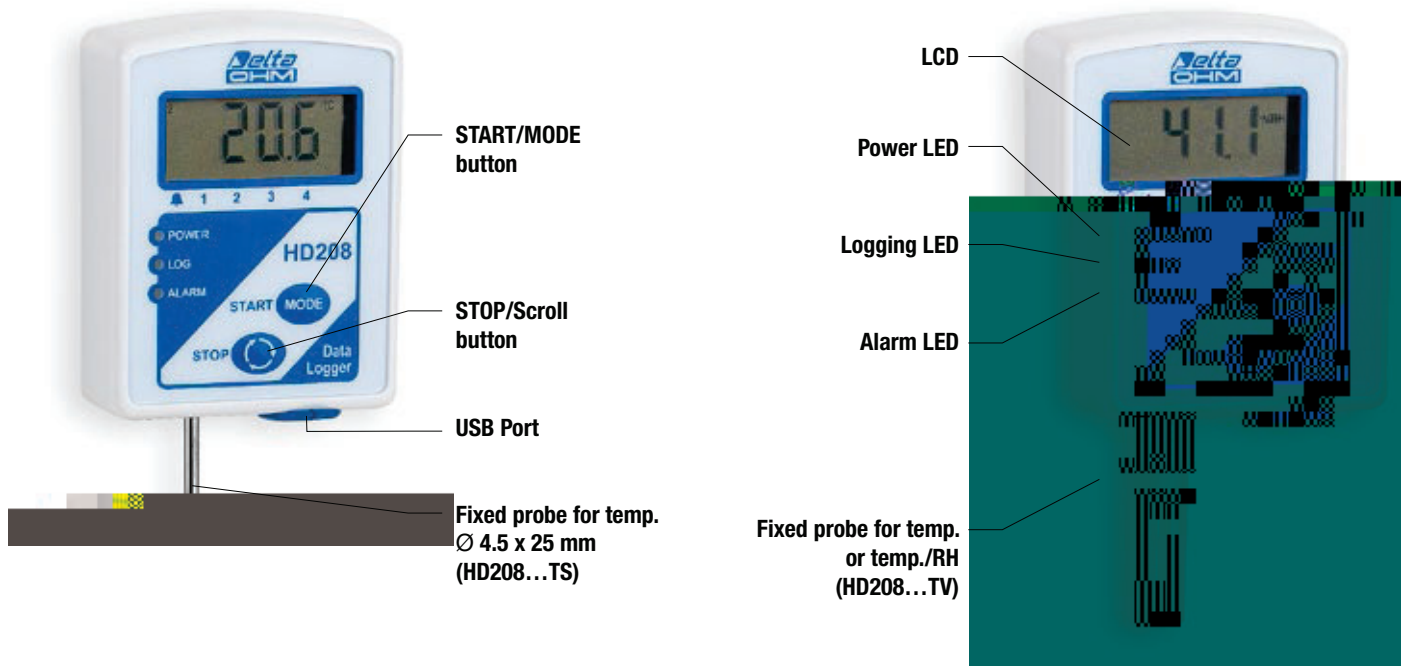

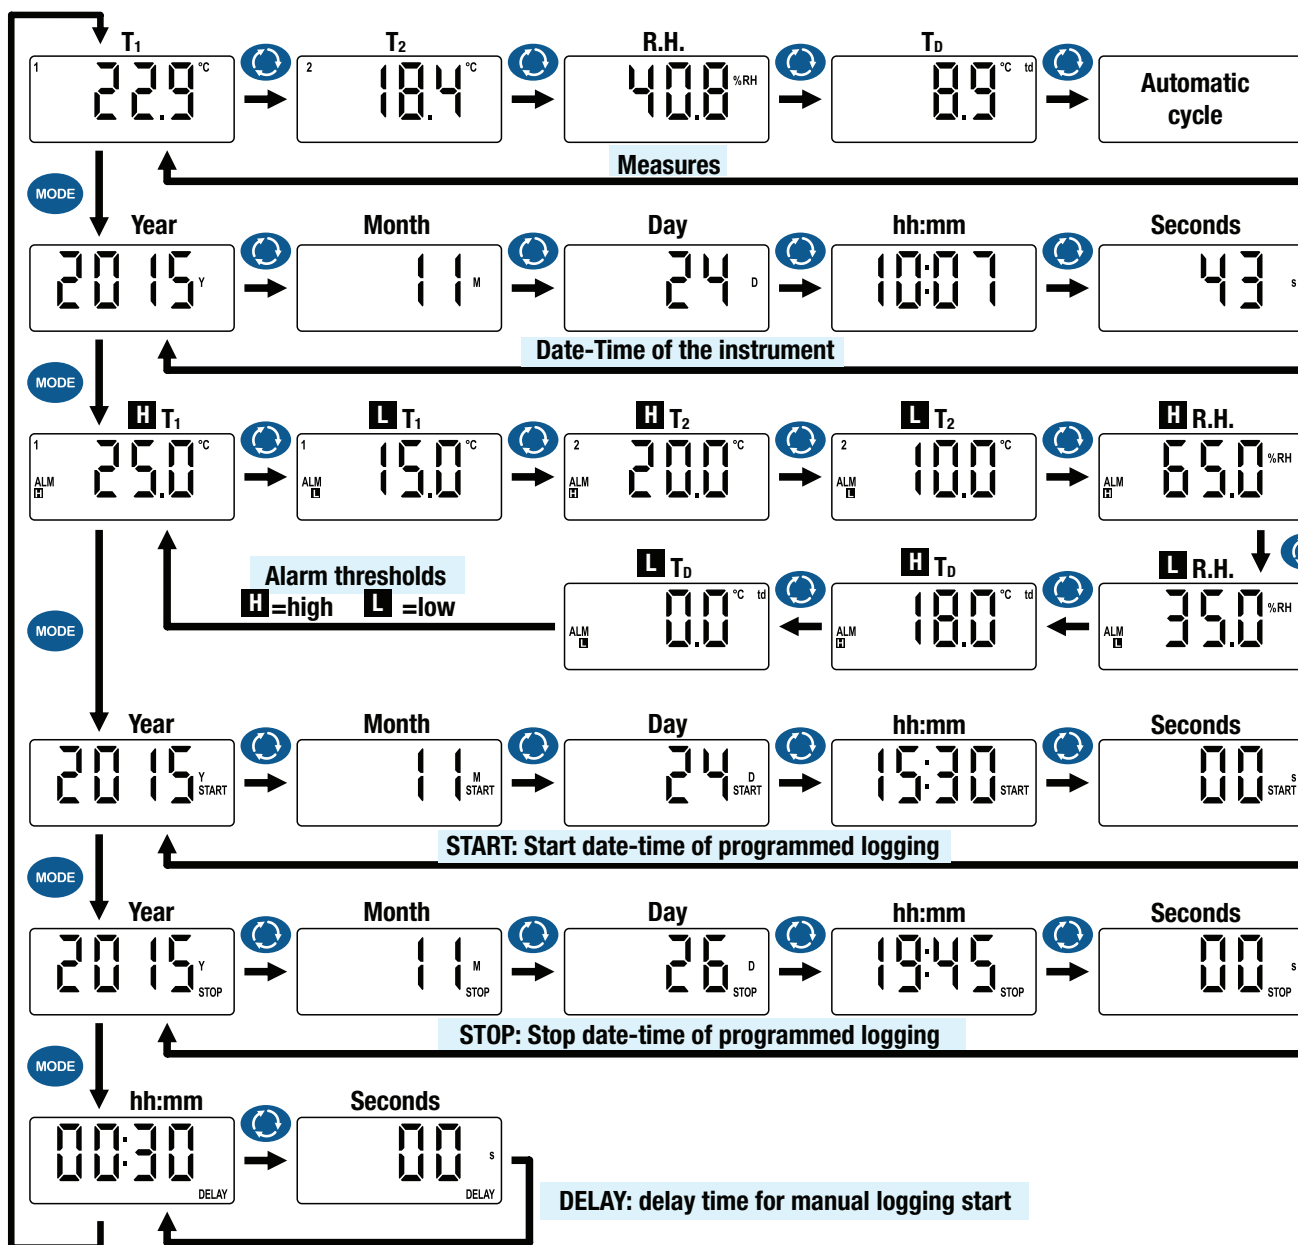

Error messages on display

If a detected quantity is in error, the following indications appear on display:

- UFL:** the measured value is less than the minimum measurable (Underflow).
- OFL:** the measured value is greater than the maximum measurable (Overflow).

LOGGING

The start of logging can be:


- Automatic,** by programming the start date and time.
- Manual,** by pressing for more than 2 seconds the button START/MODE.
- Delayed:** logging does not start immediately when you press the START/MODE button, but after the delay time set.

Logging stop can be automatic, by programming the stop date and time or the number of samples to acquire, or manually, by pressing for more than 2 seconds the STOP/ Scroll button.

The programmed time and the delay time are set using the software HD35AP-S.

During logging, the LOG symbol on the display and the LOG LED flash. In case of delayed start, during the delay time the DELAY symbol appears on the display, indicating that the instrument is waiting to start logging.

Alarm 2: temperature > upper threshold

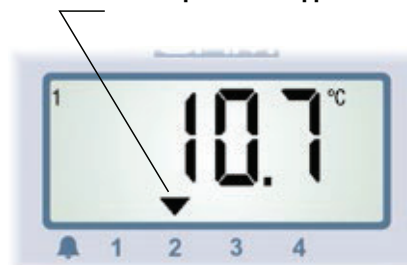


DATA S

In the graphs are shown in gray the areas of alarm (values that exceed the thresholds set).

The time required to generate the PDF file depends on the amount of data acquired, and can go from a few seconds (if the amount of data acquired is limited) up to about a minute.

Note: the PDF report is generated with the data stored in the Flash memory; the number of samples in the Flash memory may be less than the number of samples stored in the CSV file (please see the memory capacity in the specifications table).

The generation of the PDF report can be enabled/disabled by using the HD35AP-S application software or, alternatively, by holding pressed the STOP button and then pressing the reset button located on the electronic board (above the battery connector).

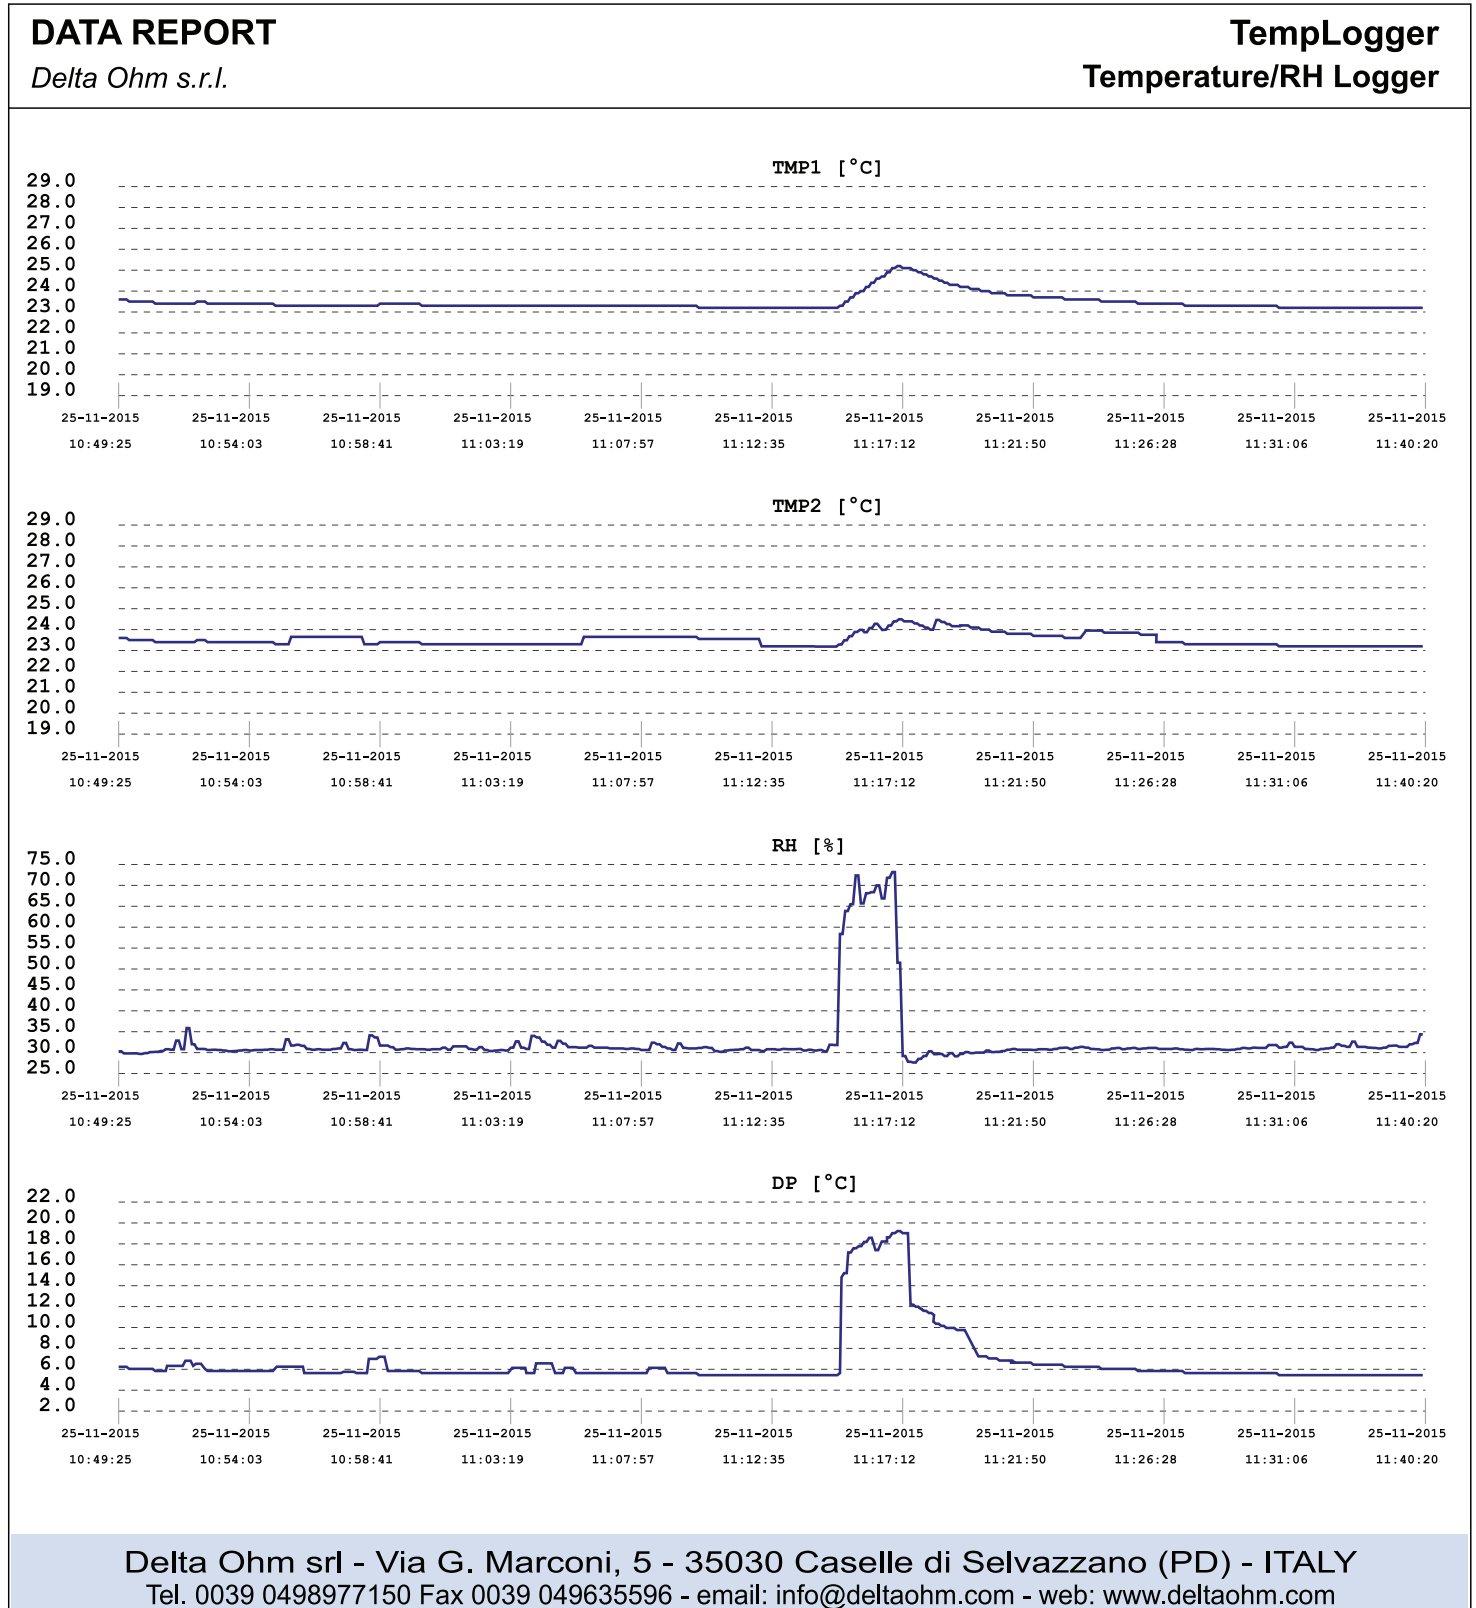

Delta Ohm srl - Via G. Marconi, 5 - 35030 Caselle di Selvazzano (PD) - ITALY
Tel. 0039 0498977150 Fax 0039 049635596 - email: info@deltaohm.com - web: www.deltaohm.com

CONNECTION TO THE PC

Pull out the protection of the USB output and connect the instrument to the PC by using the cable **CP23**. If the instrument is **not** logging, the PC detects it as a simple USB flash drive and appears the list of PDF and CSV files with the reports and the data of the logging sessions.

In order to transfer data from the internal memory of the instrument in a database in the PC, use the HD35AP-S application software following the on-line instructions of the software.

During logging it is possible to connect through the HD35AP-S software and display the measurements in real time (Monitor), but you cannot copy the PDF and CSV files in the instrument.

The connection to the PC does not require any USB driver installation.

In order to disconnect the instrument from the PC, use the "Safely Remove Hardware" function provided by the operating system. When the instrument is not connected to the PC, reposition into place the protective cap of the USB output.

Note: during PDF report generation at the end of a logging session, the instrument does not respond to the PC; wait for the instrument to finish saving the PDF file.

CONFIGURATION

The instrument parameters (date/time, logging parameters, alarm thresholds, quantities to be acquired) are configurable by connecting the instrument to a PC and using the HD35AP-S application software or, alternatively, a specially designed **PDF form** (the use of the PDF form must be enabled with HD35AP-S software).

ADVANCED SOFTWARE OPTIONS

The **HD35AP-PLUS** and **HD35AP-CFR21** software options allow you to activate additional features of the HD35AP-S software.

The **HD35AP-PLUS** option allows the **multi-client** connection to the database: it is possible to store the data in a remote database on the local network to which the PC is connected, and the data can be viewed from any PC on the network via the HD35AP S software (with the basic version, only the local database of the PC where the software is installed is usable).

The **HD35AP-CFR21** option allows, in addition to the features of the PLUS option, the protection of recorded data and configuration of the instrument in response to **FDA 21 CFR part 11** recommendations. In particular become available:

- The traceability of activities (audit trail) performed with the software; for example, which users connected and what changes were possibly made to the configuration of the instrument.
- The management of users access for the instrument configuration and viewing of data in the database. Each user can be assigned a different password for using the software. There are also three levels of access (Administrator, Super-user and standard User); for each level, the allowed operations can be defined.
- The protection of the database in which you download the data: you can make sure that data can be downloaded only in a particular database, preventing the downloading of data in different databases.

The software options are enabled by a HD208 data logger operating as hardware key when connected to the software. If more than a data logger of the series HD208 is available, it is sufficient that only one of them operates as hardware key to enable the additional features and use them with the remaining data loggers.

Monitor of the measures

Device information

Data base time interval selection

Selection of devices and quantities

Users permissions (only with HD35AP-CFR21 option)

Graph of measures

Measures

DATABASE

ID	Registration Date	Login	Description	Status	Name	Last Name	Address	Position
01	11/11/2015 15:17:17	Admin	System Administrator	Active	Admin	Admin	Address 1	Superuser
02	11/11/2015 15:55:50	Supervisor A	Supervisor A	Active	Name 1	Supervisor 2	Address 2	Supervisor
03	11/11/2015 15:24:37	Supervisor B	Supervisor B	Active	Name 2	Supervisor 3	Address 3	Supervisor
04	11/11/2015 15:26:19	User A	User A	Active	Name 4	Supervisor 4	Address 4	User
05	11/11/2015 15:26:59	User B	User B	Active	Name 5	Supervisor 5	Address 5	User
06	11/11/2015 15:27:47	User C	User C	Active	Name 6	Supervisor 6	Address 6	User



BATTERY

The instrument uses a 3.6 V **non-rechargeable** lithium-thionyl chloride (Li-SOCl₂) battery AA size. To connect the battery, or to replace a dead battery with a new one, proceed as follows:

1. Unscrew the 4 screws on the back of the case and remove the back cover.
2. In case of replacement, disconnect the battery connector from the circuit board and replace the battery with a new one of the same type.
3. Connect the battery connector to the circuit board, observing the correct polarity. The connector is equipped with a polarization key that prevents the possibility of a wrong insertion of the connector.
4. Close the case by fixing the 4 rear screws (pay attention to the correct placement of the battery, not to hinder the closing of the case).


The battery symbol at the bottom left of the display lights up when the battery is low; in this case, replace the battery as soon as possible.



Internal battery

INSTALLATION OF THE INSTRUMENT

The case of the instrument is provided with a hole on the back to fix it to a support (screw or hook) on the wall. Insert the head of the support in the lower part of the hole (width 10 mm) and lower the instrument so that the head of the support remains wedged in the upper part of the hole (width 6 mm). Make sure that the instrument cannot accidentally come out from the support.

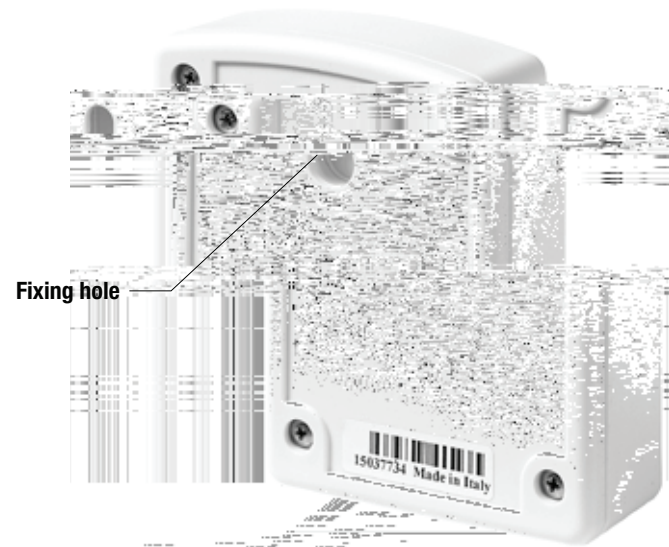

Alternatively, a fixed installation can be realized, using the **optional HD208.13** aluminium flange to be fixed on the back of the instrument case.



ORDERING CODES

HD208... Datalogger for temperature or temperature/relative humidity and dew point. **Optional LCD Display.** Configurable measurement alarms. USB output. Powered by 3.6 V non-rechargeable lithium-thionyl chloride internal battery (Li-SOCl₂). Supplied with: basic software **HD35AP-S**, battery, user manual. **The USB cable CP23 and the external probe with cable must be ordered separately.**

HD208


PROBE TYPE:
No letters = only internal temperature sensor
TC = only external probe with cable
TS = only external fixed temperature probe with stainless steel tube
TV = only external fixed temperature probe with Pocolan protective cap and stainless steel grid
TCI = external probe with cable + internal temperature sensor

QUANTITIES MEASURED:
N = temperature with NTC10k Ω sensor
7P = temperature with Pt1000 sensor
1N = temperature (NTC10k Ω sensor) and relative humidity
17P = temperature (Pt1000 sensor) and relative humidity
Options 7P and 17P (Pt1000 sensor) are possible only with external probe with cable.


LCD:
No letters = without LCD, **L** = with LCD

Temperature probes with NTC10k Ω @ 25 $^{\circ}$ C sensor


TP35N1... Temperature probe with **NTC10K Ω** sensor. Operating temperature: -20...+75 $^{\circ}$ C. Accuracy: \pm 0.3 $^{\circ}$ C in the range 0...+70 $^{\circ}$ C / \pm 0.4 $^{\circ}$ C outside. Dimensions: \varnothing 5 x 40 mm. AISI 316 stainless steel tube. M12 4-pole female connector.

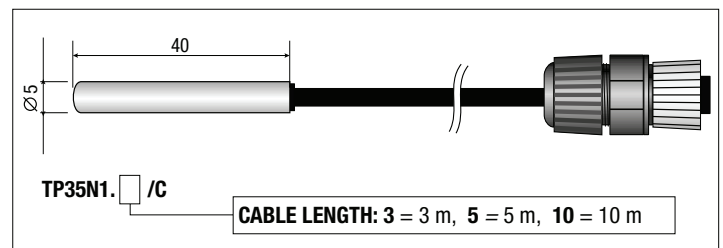

TP35N2... Temperature probe with **NTC10K Ω** sensor. Operating temperature: 0...+75 $^{\circ}$ C. Accuracy: \pm 0.3 $^{\circ}$ C in the range 0...+70 $^{\circ}$ C / \pm 0.4 $^{\circ}$ C outside. Dimensions: \varnothing 6 x 50 mm. AISI 316 stainless steel tube. M12 4-pole female connector.

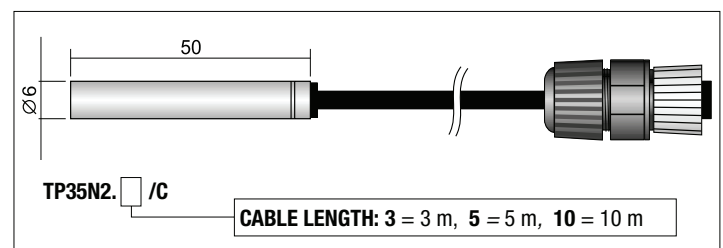


TP35N5... Penetration temperature probe with **NTC10K Ω** sensor. Operating temperature: -20...+105 $^{\circ}$ C. Accuracy: \pm 0.3 $^{\circ}$ C in the range 0...+70 $^{\circ}$ C / \pm 0.4 $^{\circ}$ C outside. Dimensions: \varnothing 4 x 100 mm. AISI 316 stainless steel tube. M12 4-pole female connector.

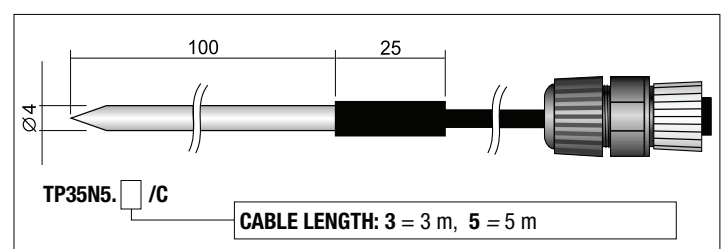


Temperature probes with Pt1000 sensor


TP35.1... Temperature probe with **Pt1000** 1/3 DIN 4-wire sensor. Operating temperature: -50...+105 °C. Dimensions: Ø 5 x 40 mm. AISI 316 stainless steel tube. M12 4-pole female connector.

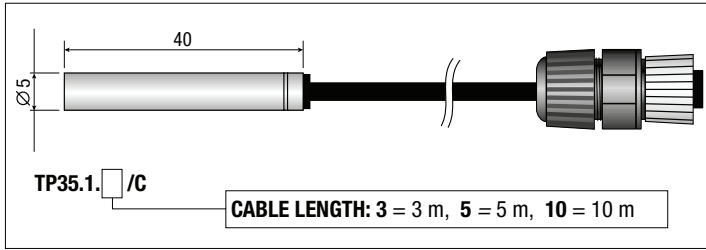

TP35.2... Temperature probe with **Pt1000** 1/3 DIN 3-wire sensor. Operating temperature: 0...+70 °C. Dimensions: Ø 5 x 20 mm. Thermoplastic rubber tube. M12 4-pole female connector.

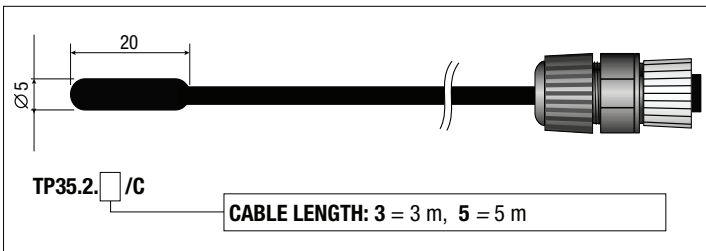


TP35.5... Temperature probe with **Pt1000** 1/3 DIN 3-wire sensor. Operating temperature: -40...+300 °C. Dimensions: Ø 4 x 100 mm. AISI 316 stainless steel tube. M12 4-pole female connector.

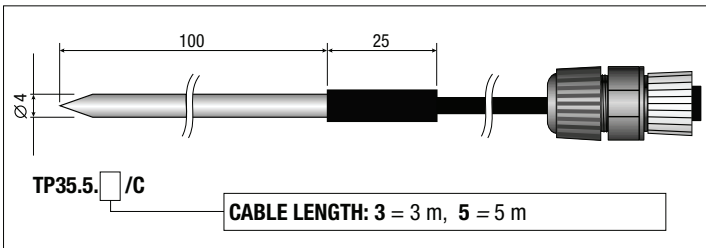

Note: the TP35... temperature only probes with Pt1000 sensor can not be connected to the models HD208[L]17PTC...

Temperature and relative humidity combined probes

HP3517... Temperature and relative humidity combined probe. R.H. sensor measuring range: 0...100%. Temperature sensor: NTC10kΩ @ 25 °C (HP3517TC...) or Pt1000 (HP3517E2TC...). NTC10kΩ sensor measuring range: -40...+105 °C. Pt1000 sensor measuring range: -40...+150 °C. R.H. sensor operating temperature: -40...+80 °C standard, -40...+150 °C with **E2 option**. M12 4-pole (HP3517TC...) or 8-pole (HP3517E2TC...) female connector. Pocan® plastic body.

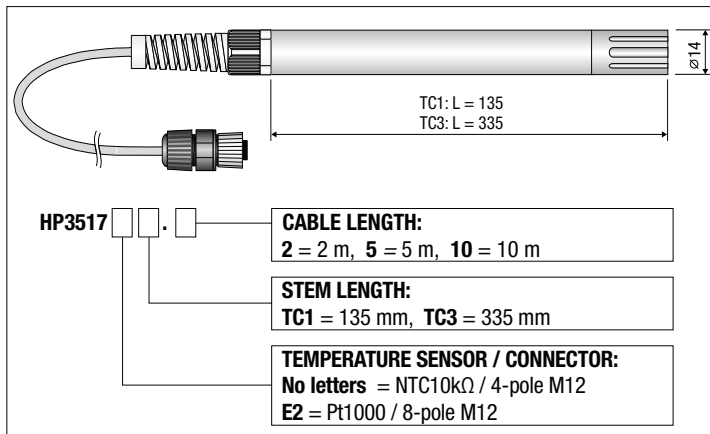

Accessories

HD35AP-S Additional copy of the CD-ROM with basic HD35AP-S software for the configuration of the instrument, the monitoring and downloading of data in the database. For Windows® operating systems.

HD35AP-PLUS Advanced version of the HD35AP-S software allowing **multi-client connection to the Database**.

HD35AP-CFR21 Advanced version of the HD35AP-S software including, **in addition to the features of the PLUS option**, the management of the data logging system in accordance with the **FDA 21 CFR part 11 recommendations**.

CP23 Direct USB connection cable with mini-USB male connector on the instrument side and USB type A male connector on the PC side.

HD208.13 Aluminium flange for fixing the instrument to the wall.

HD35-BAT2 3.6 V **non-rechargeable** lithium-thionyl chloride (Li-SOCl₂) battery, size AA, 2-pin Molex 5264 connector.

HD75 Saturated solution for testing the Relative Humidity probes at 75% RH, supplied with adapter for probes diameter 14 mm thread M12x1.

HD33 Saturated solution for testing the Relative Humidity probes at 33% RH, supplied with adapter for probes diameter 14 mm thread M12x1.



MANUFACTURE OF PORTABLE, BENCH TOP AND PROCESS SCIENTIFIC INSTRUMENTS

Current and voltage loop transmitters and regulators

Temperature - Humidity, Dew point - Pressure - CO, CO₂

Air speed - Light - Optical Radiation

Acoustics - Vibration

Data logger - Data logger wireless

Microclimate

pH - Conductivity - Dissolved Oxygen - Turbidity

Elements for weather stations



LAT N° 124 Signatory of EA, IAF and ILAC Mutual Recognition Agreements

Temperature - Humidity - Pressure - Air speed

Photometry/Radiometry - Acoustics

CE CONFORMITY

Directives:

- Low Voltage Directive 2014/35/EU
- Electromagnetic Compatibility Directive 2014/30/EU
- RoHS Directive 2011/65/EU

Harmonised standards:

- Safety EN 61010-1:2010
- EMC EN 61326-1:2013
- RoHS EN 50581:2012



Delta Ohm srl

Via G. Marconi, 5

35030 Caselle di Selvazzano (PD) - Italy

Tel. 0039 0498977150 r.a.

Fax 0039 049635596

e-mail: info@deltaohm.com

Web Site: www.deltaohm.com

